


- 1. PANEL VERTICAL AND HORIZONTAL JOINT SPACING SHOULD BE 5/16" TYPICAL.
- 2. EPDM GASKET **MUST** BE INSTALLED CONTINUOUSLY ON ALL SUBFRAMING.

SCALE: 6"=1'-0"



KØL HIGH DENSITY FIBRE CEMENT FACADE PANELS KOLFACADE.COM Ref.:

Typical Butt Joint Detail

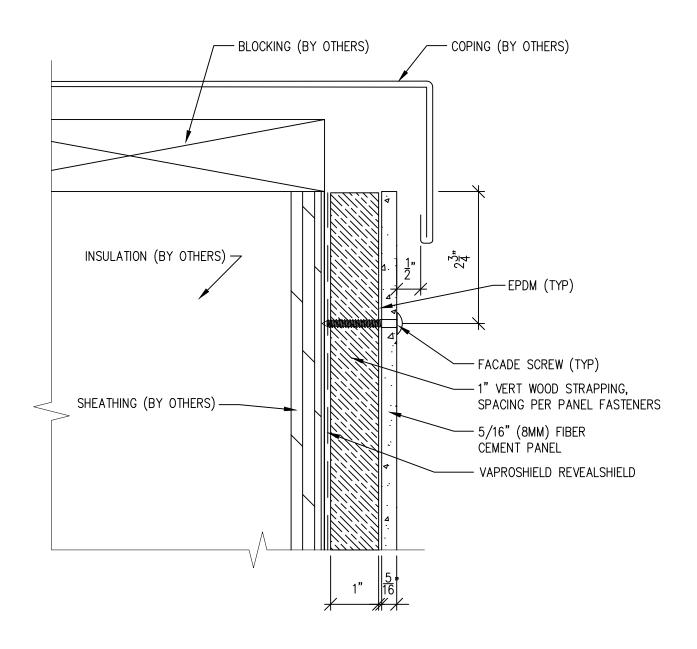


- 1. PANEL VERTICAL AND HORIZONTAL JOINT SPACING SHOULD BE 5/16" TYPICAL.
- 2. EPDM GASKET **MUST** BE INSTALLED CONTINUOUSLY ON ALL SUBFRAMING.

SCALE: 6"=1'-0"



KØL HIGH DENSITY FIBRE CEMENT FACADE PANELS KOLFACADE.COM Ref.:

Typical Coping Panel Detail

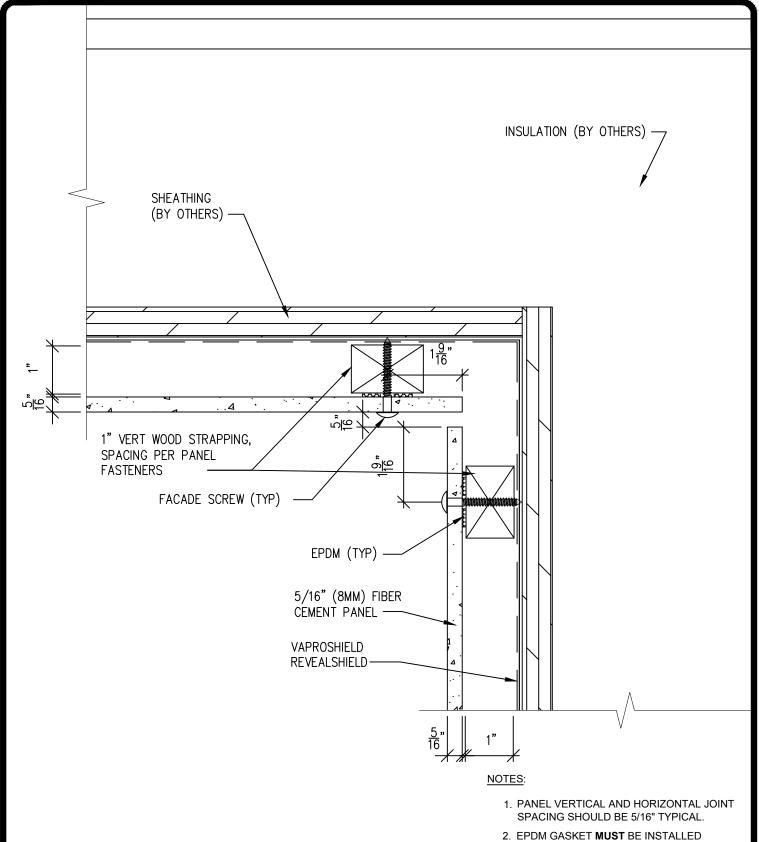


EPDM GASKET MUST BE INSTALLED CONTINUOUSLY ON ALL SUBFRAMING.

SCALE: 6"=1'-0"



KØL HIGH DENSITY FIBRE CEMENT FACADE PANELS KOLFACADE.COM Ref.:

Typical Inside Corner Detail

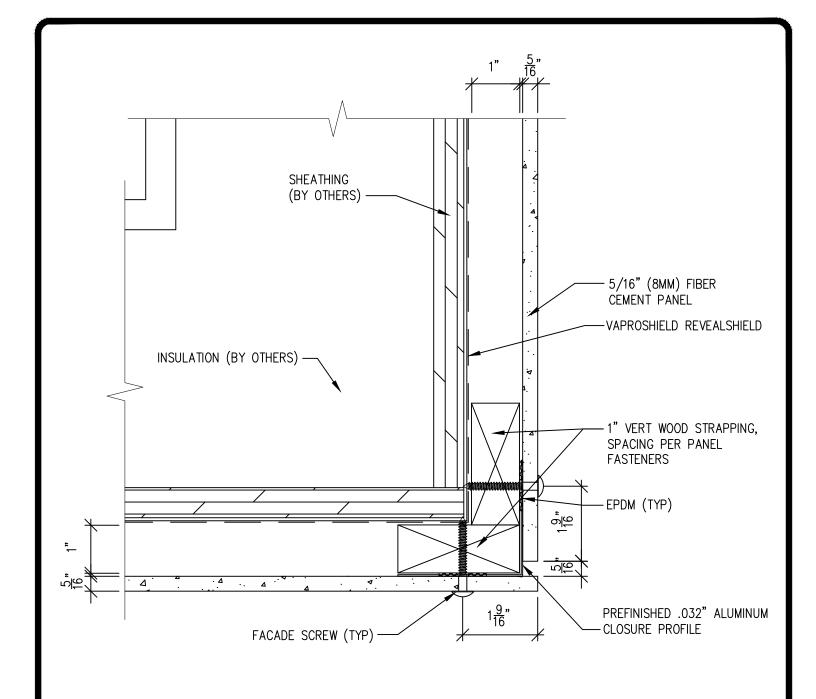


- 1. PANEL VERTICAL AND HORIZONTAL JOINT SPACING SHOULD BE 5/16" TYPICAL.
- 2. EPDM GASKET **MUST** BE INSTALLED CONTINUOUSLY ON ALL SUBFRAMING.

SCALE: 6"=1'-0"



KØL HIGH DENSITY FIBRE CEMENT FACADE PANELS KOLFACADE.COM Ref.:

Typical Outside Corner Detail

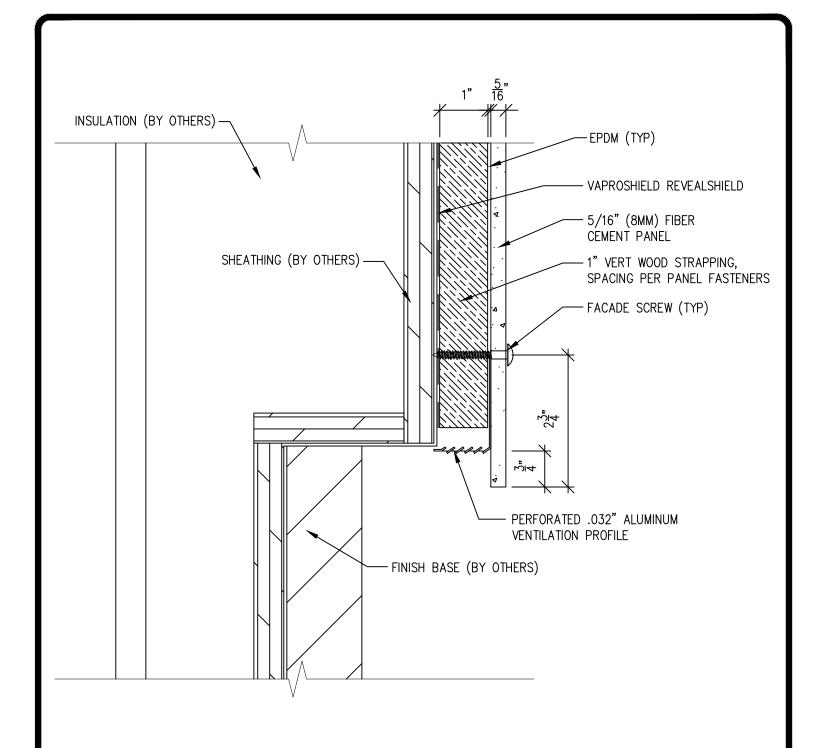


- 1. PANEL VERTICAL AND HORIZONTAL JOINT SPACING SHOULD BE 5/16" TYPICAL.
- 2. EPDM GASKET **MUST** BE INSTALLED CONTINUOUSLY ON ALL SUBFRAMING.


SCALE: 6"=1'-0"




KØL HIGH DENSITY FIBRE CEMENT FACADE PANELS KOLFACADE.COM Ref.:

Typical Panel Base Detail

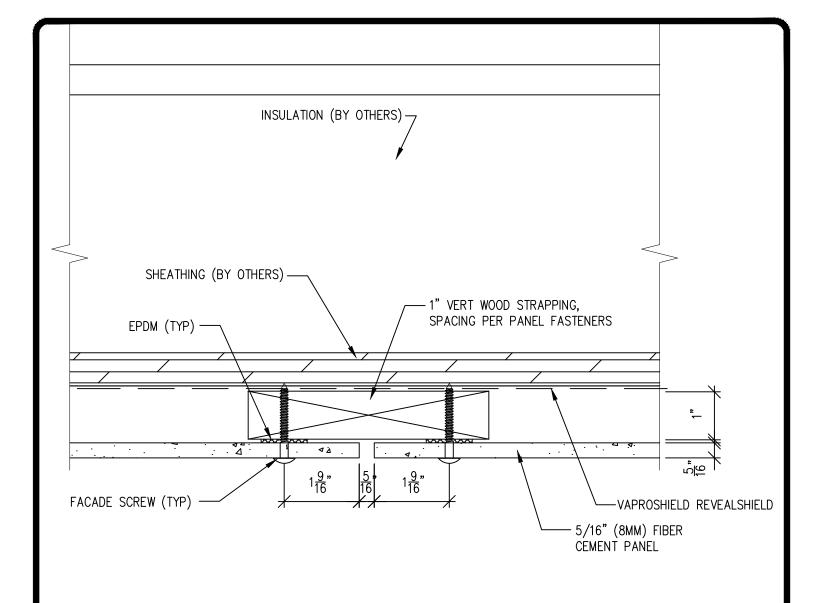

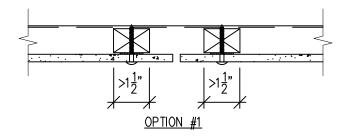

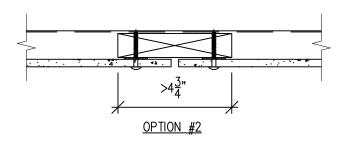


- 1. PANEL VERTICAL AND HORIZONTAL JOINT SPACING SHOULD BE 5/16" TYPICAL.
- 2. EPDM GASKET **MUST** BE INSTALLED CONTINUOUSLY ON ALL SUBFRAMING.

SCALE: 6"=1'-0"



KØL HIGH DENSITY FIBRE CEMENT FACADE PANELS KOLFACADE.COM Ref.:


Typical Vertical Panel Joint Detail

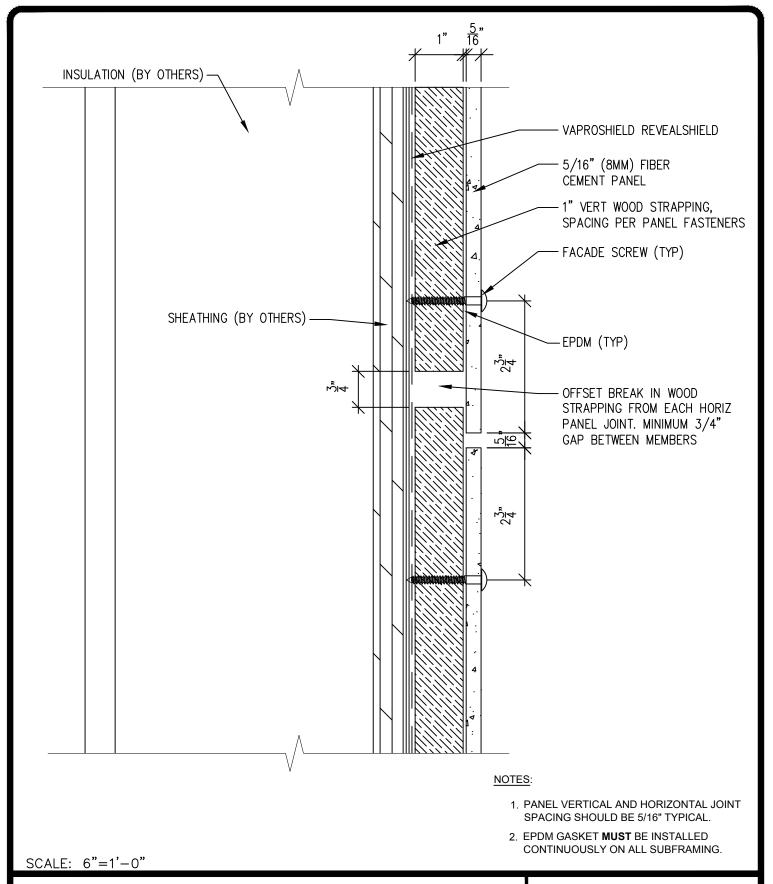



KØL HIGH DENSITY FIBRE CEMENT FACADE PANELS KOLFACADE.COM Ref.:

Typical Horizontal Panel Joint Detail

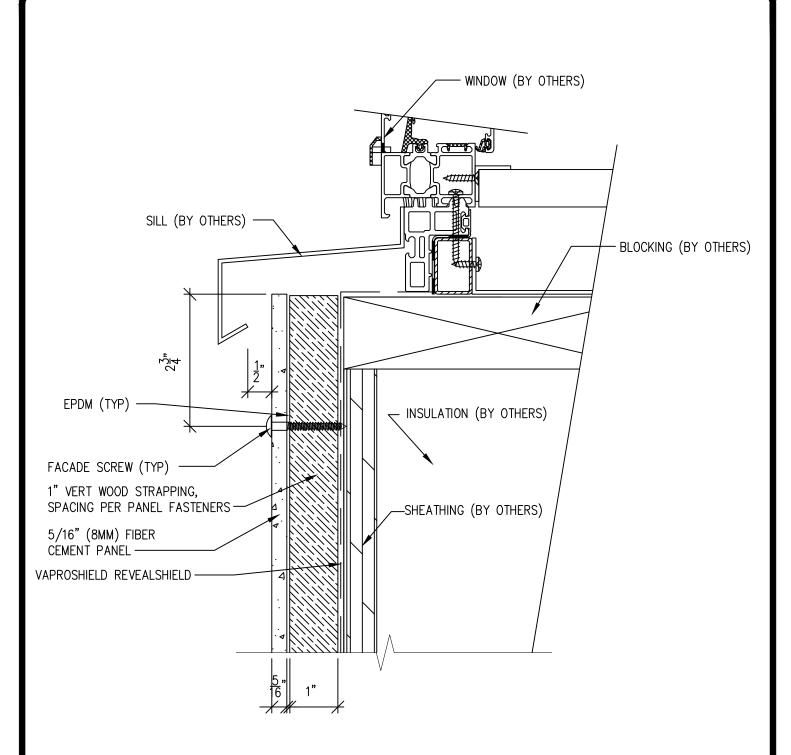


- 1. PANEL VERTICAL AND HORIZONTAL JOINT SPACING SHOULD BE 5/16" TYPICAL.
- 2. EPDM GASKET **MUST** BE INSTALLED CONTINUOUSLY ON ALL SUBFRAMING.

SCALE: 6"=1'-0"



KØL HIGH DENSITY FIBRE CEMENT FACADE PANELS KOLFACADE.COM Ref.:

Typical Window Sill Detail

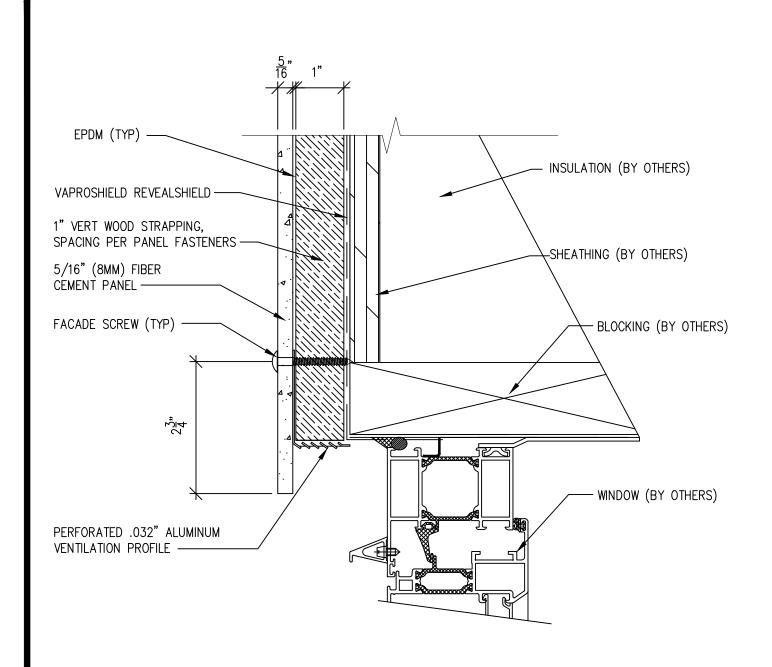


- 1. PANEL VERTICAL AND HORIZONTAL JOINT SPACING SHOULD BE 5/16" TYPICAL.
- 2. EPDM GASKET **MUST** BE INSTALLED CONTINUOUSLY ON ALL SUBFRAMING.

SCALE: 6"=1'-0"



KØL HIGH DENSITY FIBRE CEMENT FACADE PANELS KOLFACADE.COM Ref.:

Typical Window Head Detail

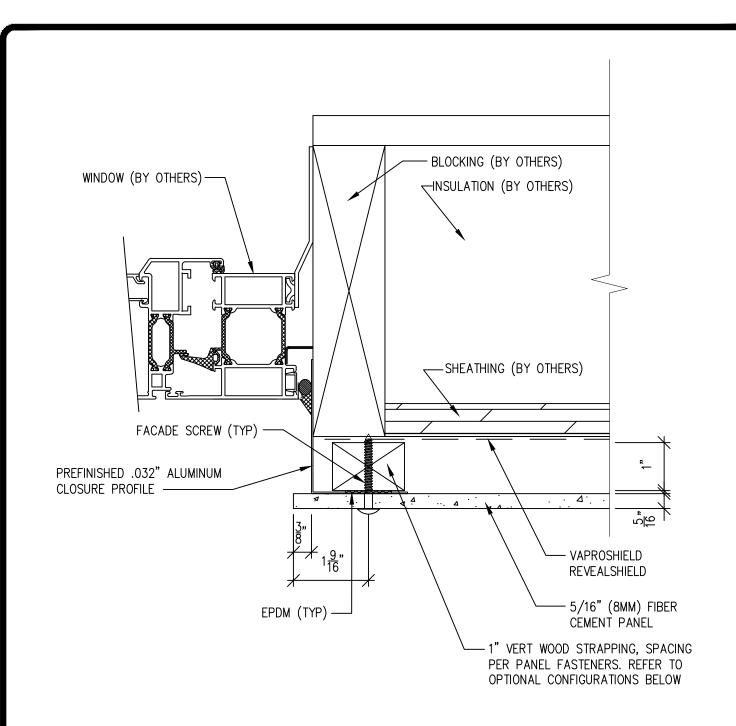


- 1. PANEL VERTICAL AND HORIZONTAL JOINT SPACING SHOULD BE 5/16" TYPICAL.
- 2. EPDM GASKET **MUST** BE INSTALLED CONTINUOUSLY ON ALL SUBFRAMING.

SCALE: 6"=1'-0"



KØL HIGH DENSITY FIBRE CEMENT FACADE PANELS KOLFACADE.COM Ref.:

Typical Window Jamb Detail

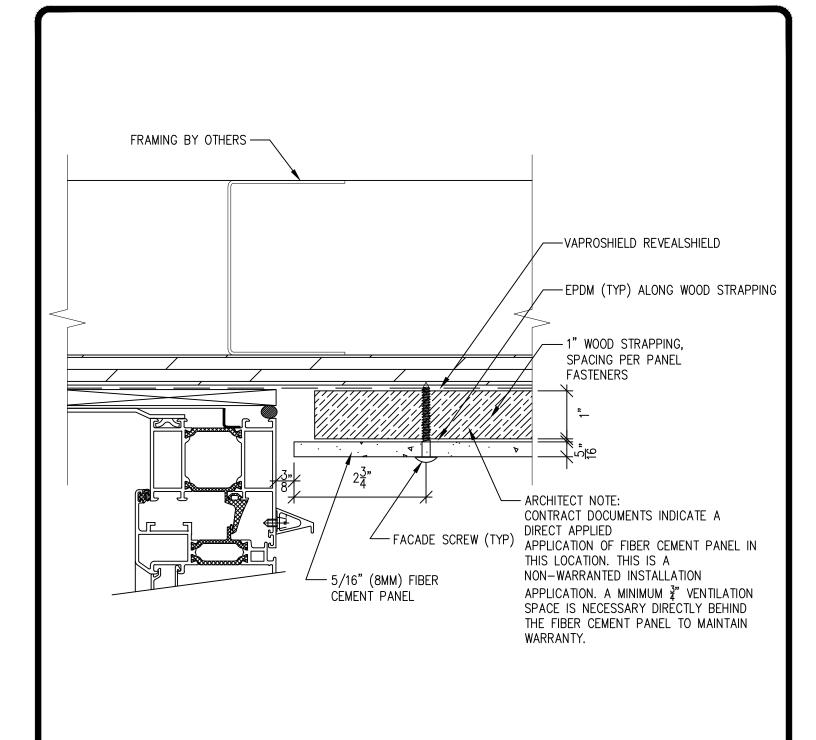


- 1. PANEL VERTICAL AND HORIZONTAL JOINT SPACING SHOULD BE 5/16" TYPICAL.
- 2. EPDM GASKET **MUST** BE INSTALLED CONTINUOUSLY ON ALL SUBFRAMING.

SCALE: 6"=1'-0"



KØL HIGH DENSITY FIBRE CEMENT FACADE PANELS KOLFACADE.COM Ref.:

Typical Window Jamb Detail

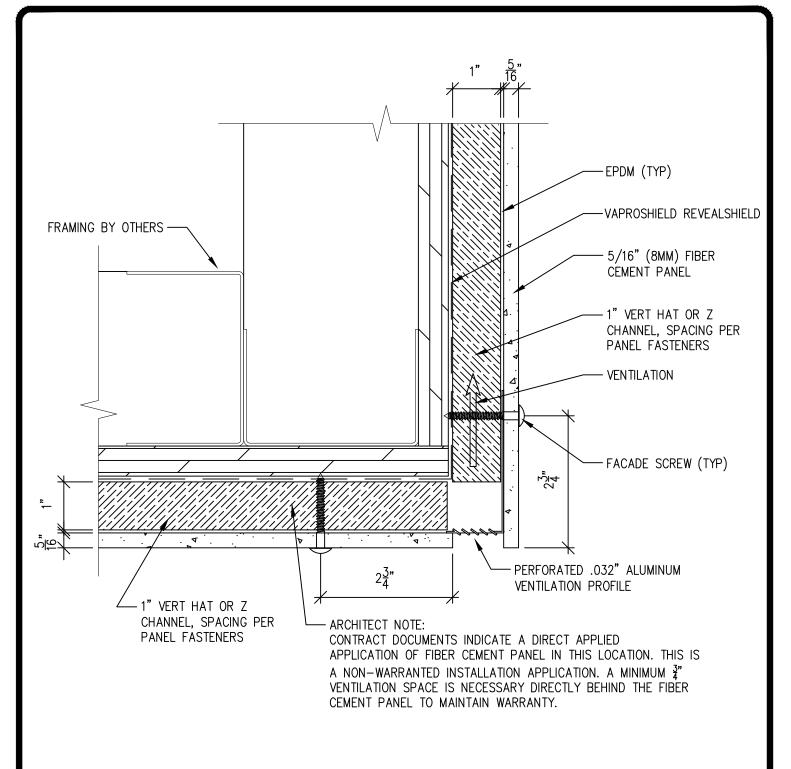

- 1. PANEL VERTICAL AND HORIZONTAL JOINT SPACING SHOULD BE 5/16" TYPICAL.
- 2. EPDM GASKET **MUST** BE INSTALLED CONTINUOUSLY ON ALL SUBFRAMING.

SCALE: 6"=1'-0"



KØL HIGH DENSITY FIBRE CEMENT FACADE PANELS KOLFACADE.COM Ref.:

Typical Window Jamb Detail